

TECHNICAL SERVICE

Bulletin

Date: 4/24/02 - **Rev. 11/3/17 TSB #** 02-003B

Lip Cylinder Replacement Instructions (VH & PR models)

MARNING

These instructions are for use by qualified service professionals only. If you are not qualified to work on hydraulic dock levelers and associated electrical power supplies - **STOP! DO NOT PROCEED!**

- 1. Raise dock leveler.
- 2. Support leveler by raising maintenance prop. Lock out and tag out prop according to OSHA regulations until service is complete.
- 3. Disconnect power to leveler.
- 4. Temporarily lock out and tag out the power source according to OSHA regulations and approved local electrical codes.
- 5. Barricade the work area to prevent use of the unit before the installation is completed.
- 6. Disconnect hydraulic line and weep line (if equipped).
- 7. Cap hydraulic line with #6 JIC fitting to prevent fluid leakage.
- 8. Remove 90 degree elbow (weep line fitting) or breather cap from old cylinder.
- 9. Install elbow or breather in new cylinder.
- 10. Cap cylinder hydraulic line and weep hole with caps from replacement cylinder.
- 11. Remove spring bar (if equipped).
- 12. Front of cylinder: remove cotter pin and clevis pin from cylinder yoke.
- 13. Rear of cylinder: remove two hair pins and clevis pin.
- 14. Remove cylinder from leveler.
- 15. Install new cylinder by following steps in reverse order.
- 16. Remove lock out from control box and reconnect power to leveler.
- 17. Cycle leveler, checking for proper operation and fluid leaks.
- 18. Check fluid level with ramp in below-dock position add fluid as needed.

LIP CYLINDER PARTS BREAKDOWN		
ITEM	DESCRIPTION	PART NUMBER
1	Pin, Clevis, Lip Cylinder	0522-0005
2	Cotter Pin	2101-0045
3	Fitting Elbow, 90 deg., Male	0521-0007
	Fitting, Breather, Brass	0521-0028
4	Spring, 1-3/4" dia. x 4"	0522-0002
5	Hold Down Weldment	Varies By Model
6	Pin, Lip Cylinder, Mounting	9202-0004
7	Hair Pin Clip (requires 2)	2101-0049
8	Lip Cylinder 14"	0525-0086
	Lip Cylinder 20"	0525-0087

